
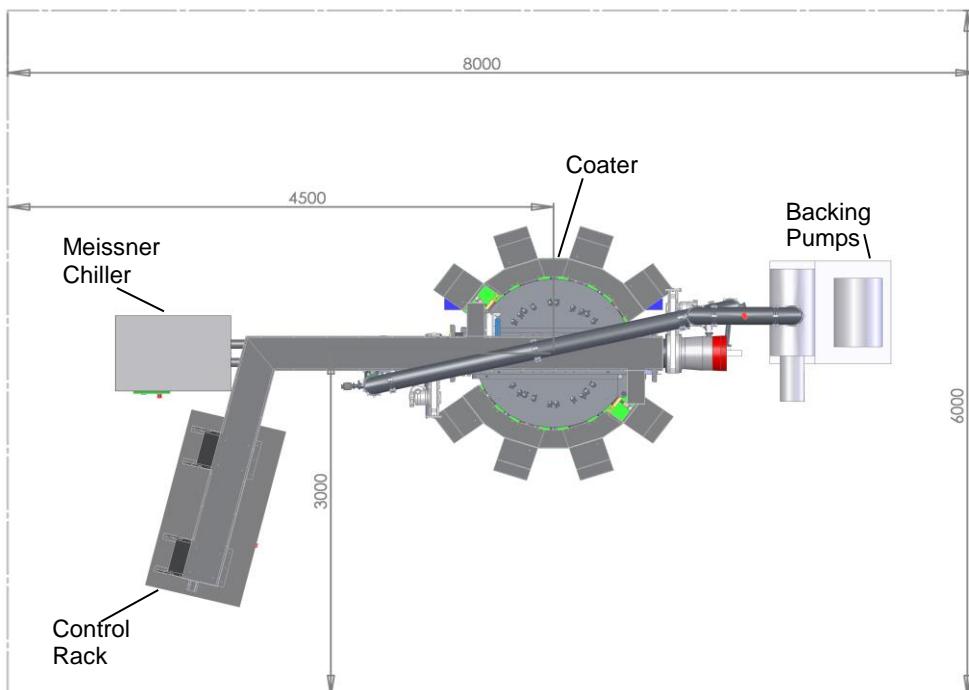


CFM 1050 Coating System

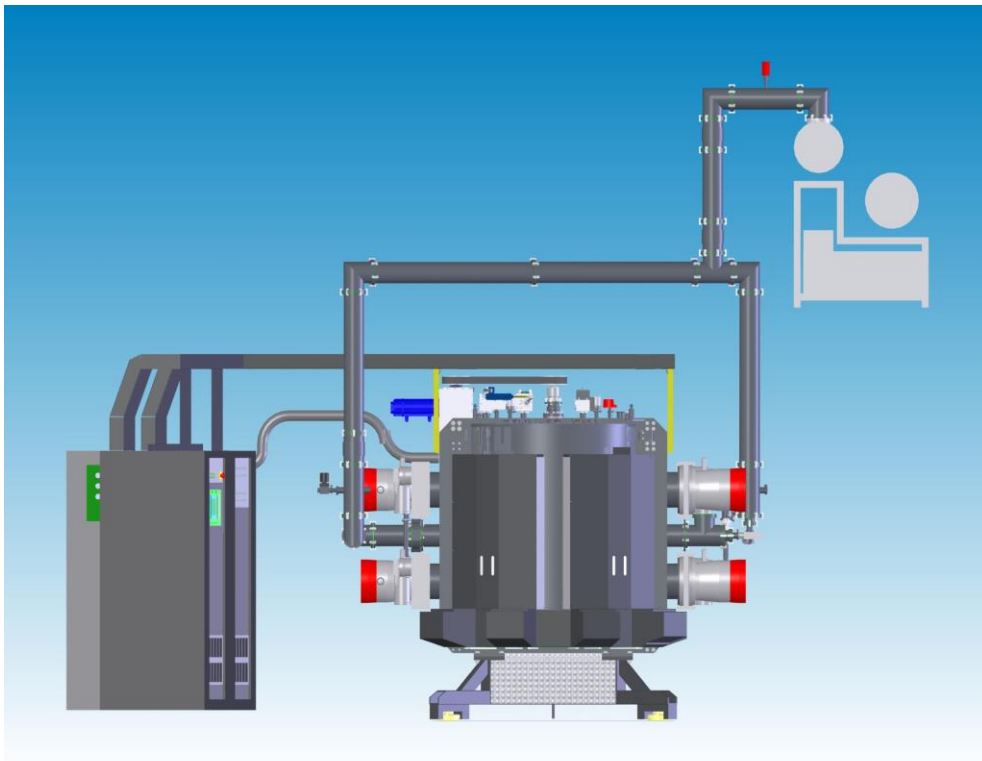

The floor area shown is the minimum and a larger area may be required, depending on access, doorways and so on. The control rack is rigidly connected to the vacuum system and the Meissner chiller is connected to the vacuum system by rigid hoses and cannot be moved once installed. Roughing pumps are in a separate unit connected to the vacuum system via large-diameter stainless steel pipe and can be installed on a different floor level to minimise noise around the coater. A water chiller is also required: this should preferably be installed on the coater floor level, to avoid pressure problems, and this will need appropriate ventilation and noise shielding; contact the factory for details of suitable chillers. Access and storage space